




接入气动装置

Connect to pneumatic device

接入220V双相电

Connect to 220V dual-phase power

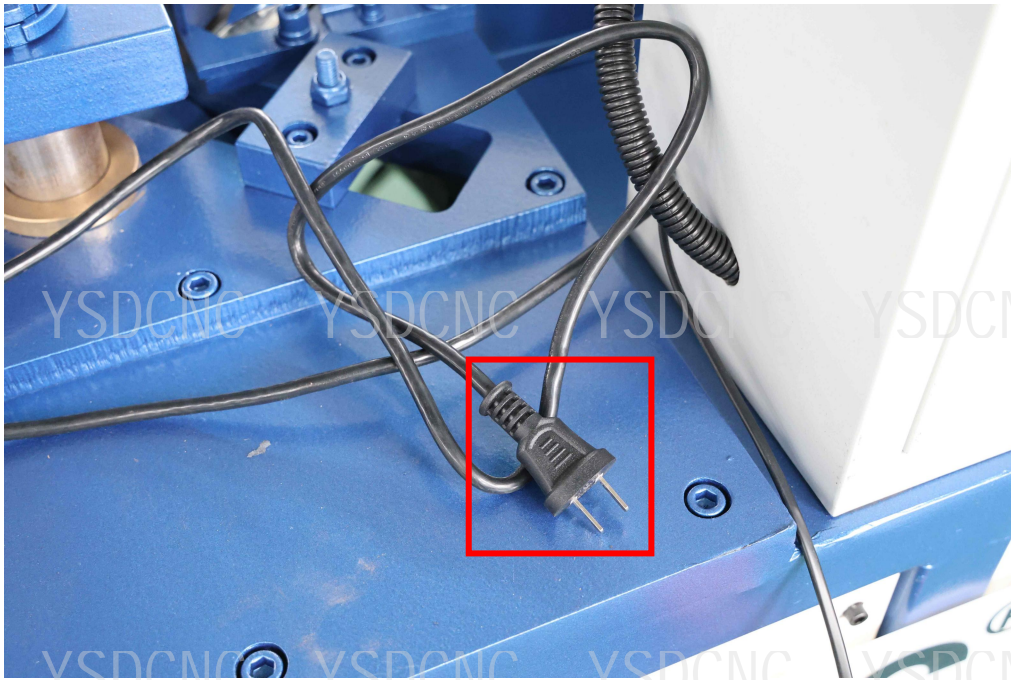




打开急停开关

Turn on the emergency stop switch



可以手动按油泵键使机器开始工作
或者踩脚踏开关使机器开始工作

You can manually press the oil pump button to start the machine, or you can use the foot pedal to start the machine.

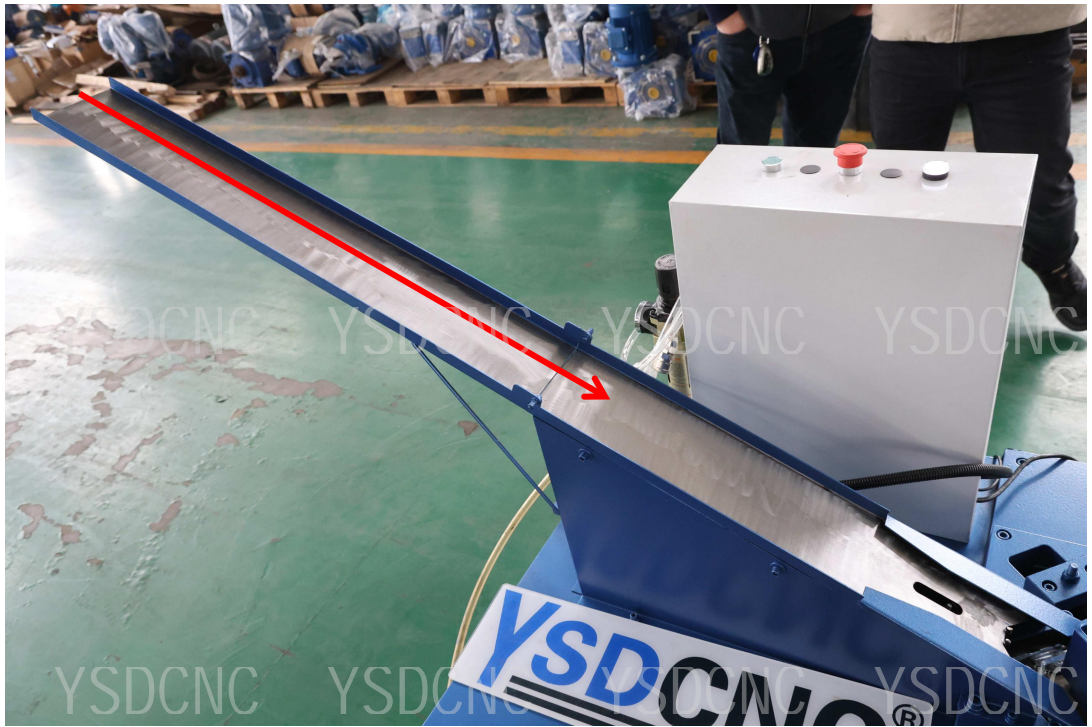

从箭头指示方向放入角码

Place the corner bracket in the direction indicated by the arrow.



YSDCNC YSDCNC YSDCNC YSDCNC YSDCNC


YSDCNC YSDCNC YSDCNC YSDCNC YSDCNC

YSDCNC YSDCNC YSDCNC YSDCNC YSDCNC



踩下脚踏开关使1个角码落入装订器内

Stepping on the foot switch causes one corner piece to fall into the stapler.

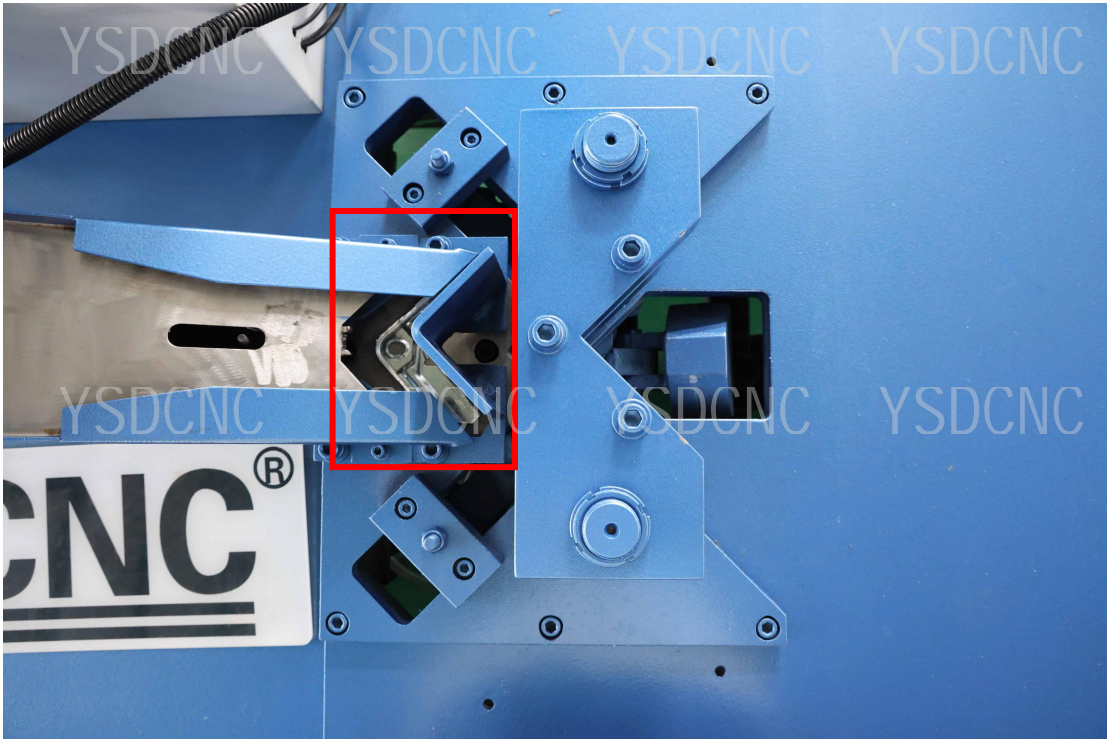



YSDCNC YSDCNC YSDCNC YSDCNC YSDCNC

YSDCNC YSDCNC YSDCNC YSDCNC YSDCNC

放上要装订的风管

踩下脚踏开关，机器开始装订

Place the air duct to be bound, press the foot switch, and the machine will begin binding.

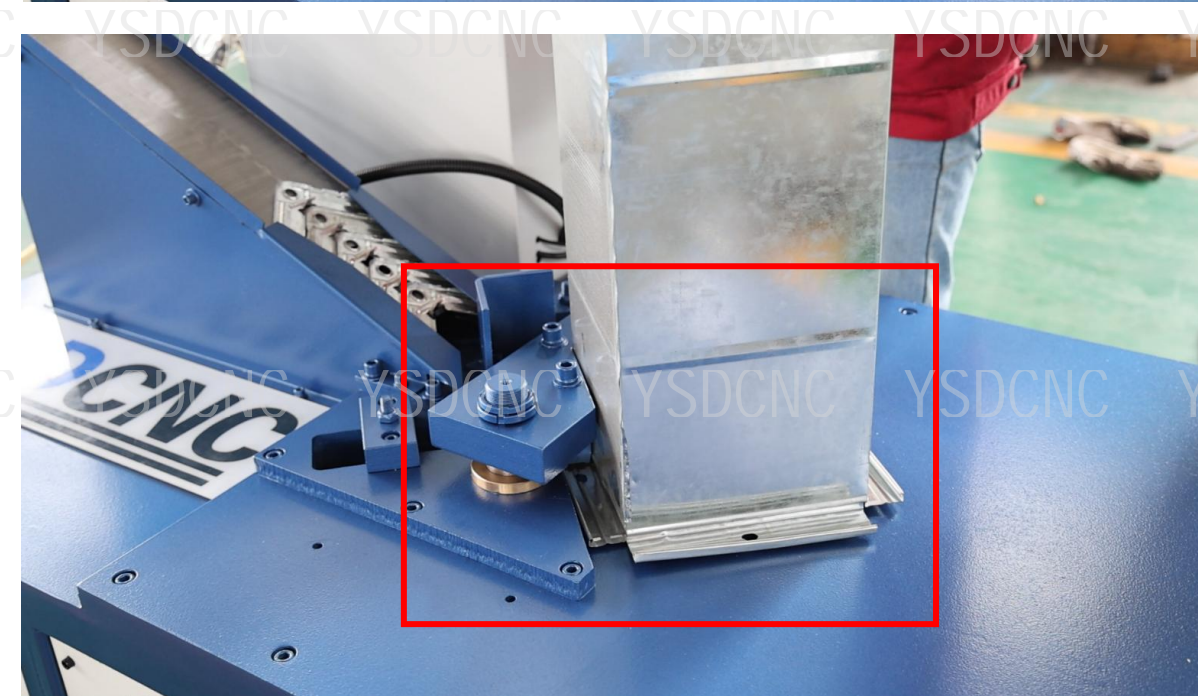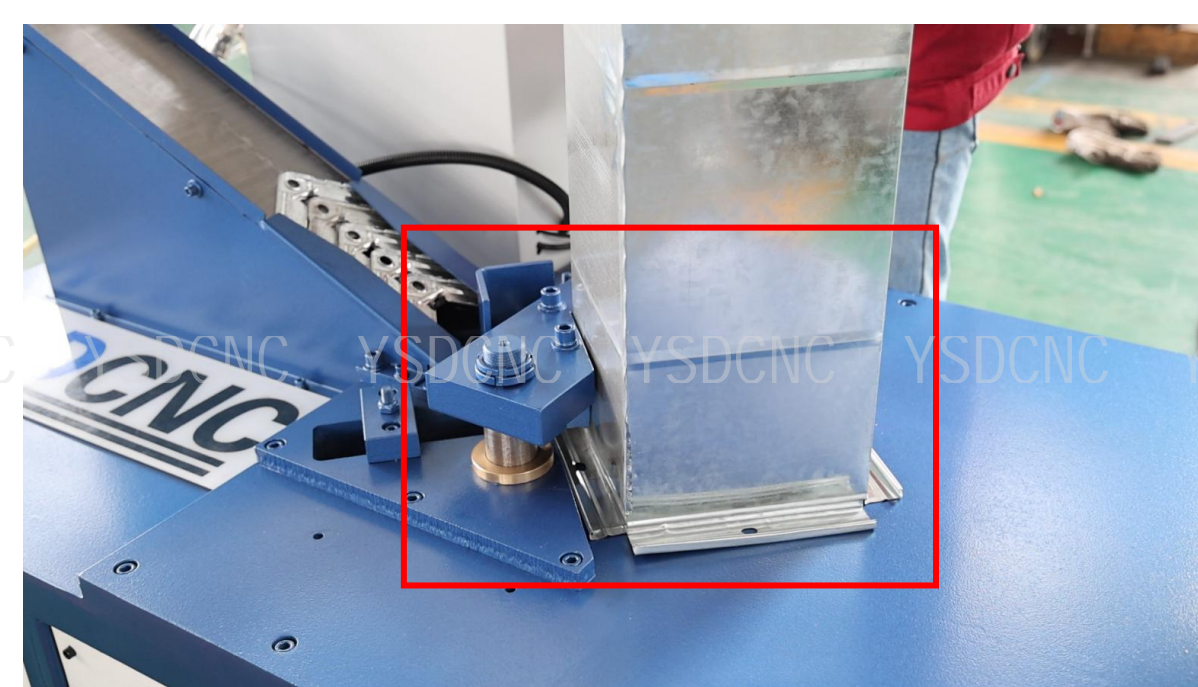



风管四个角装订完成

After the four corners of the air duct are assembled